


PANEL AND SUBMONITOR SERIAL NUMBER LOCATIONS


Locating Panel Serial Numbers

1. Open the enclosure to expose the control panel.
2. The UL label with the panel serial numbers is in the lower left corner of the on the inside of the enclosure door.
See picture below:

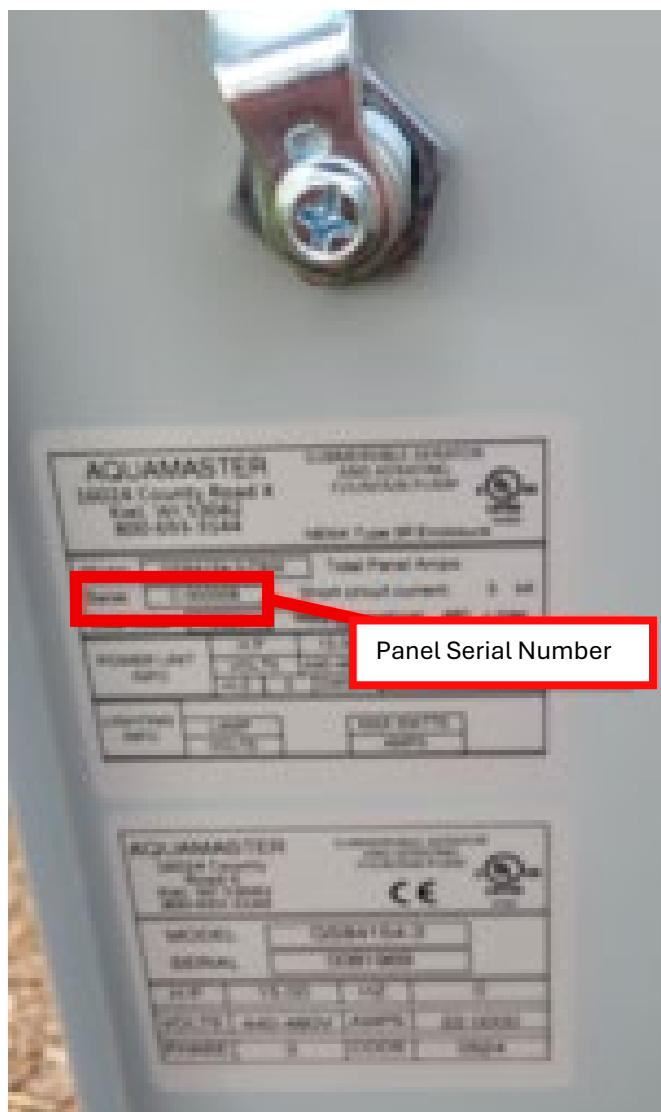


Locating SubMonitor Serial Numbers

1. Locate the SubMonitor on the panel. It is clearly labeled “SubMonitor”. See picture below:

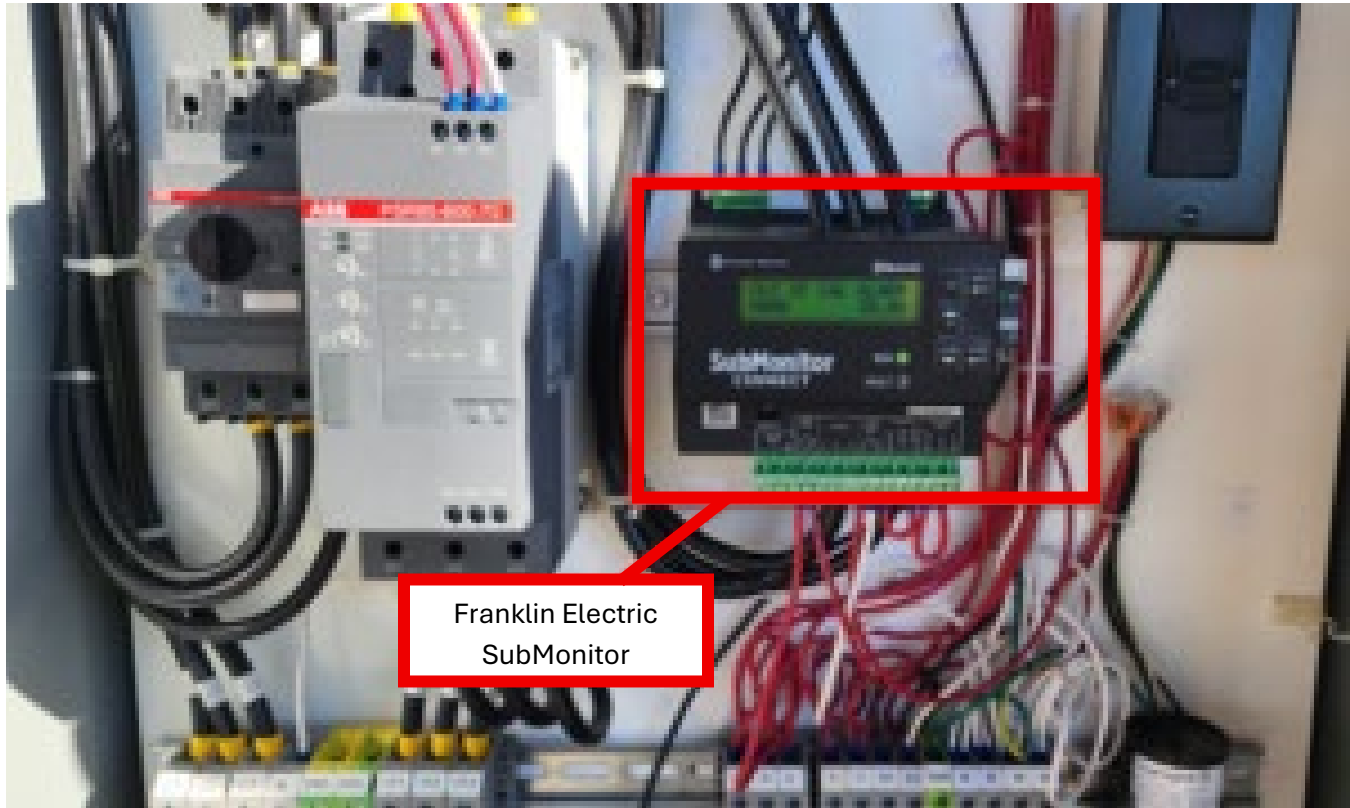


2. Once the SubMonitor is located, the serial number can be found on the lower right portion of the SubMonitor frame. See pictures below.

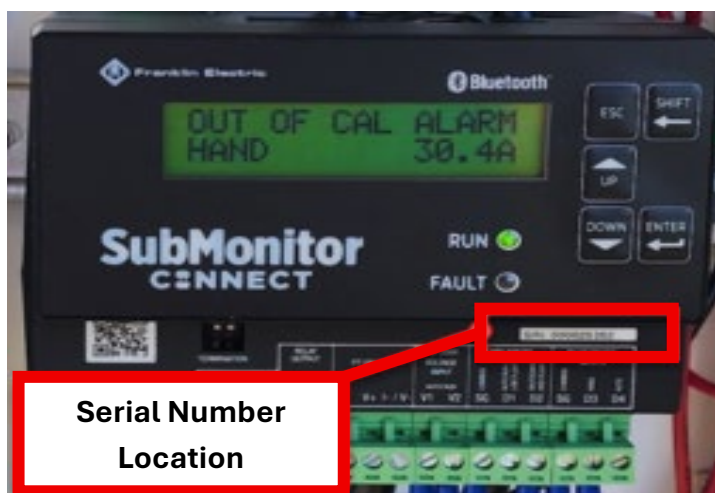

Serialization Tag Locations

#3 Unit Serialization

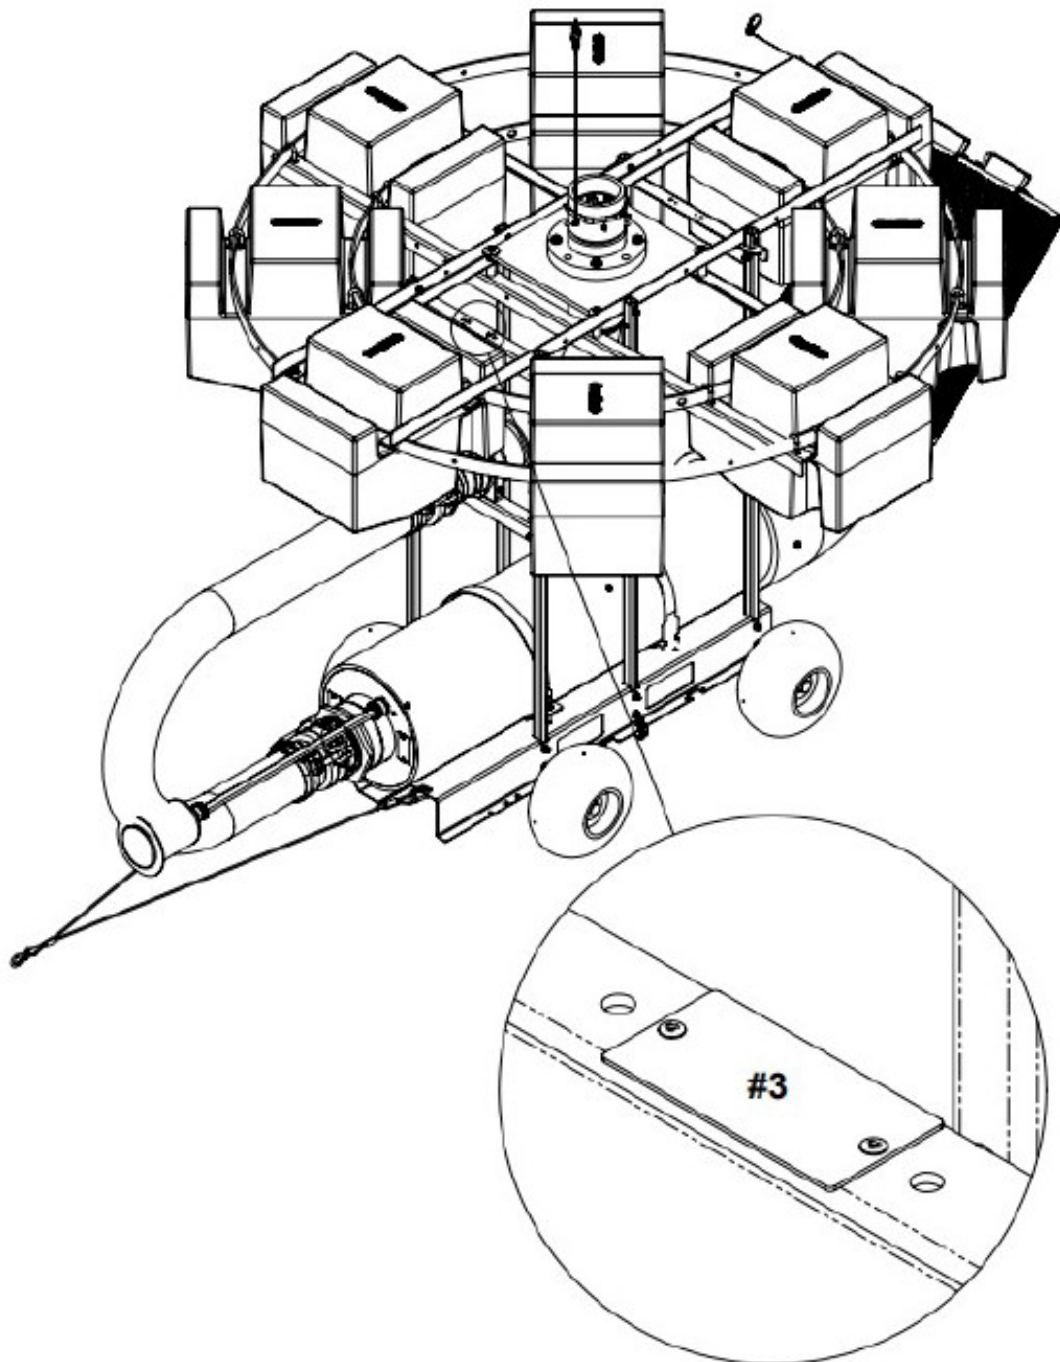


ENLARGED VIEW
TO SHOW DETAIL

Serialization Tag Locations

#1 Pump Assembly Serialization

#2 Power Unit Serialization

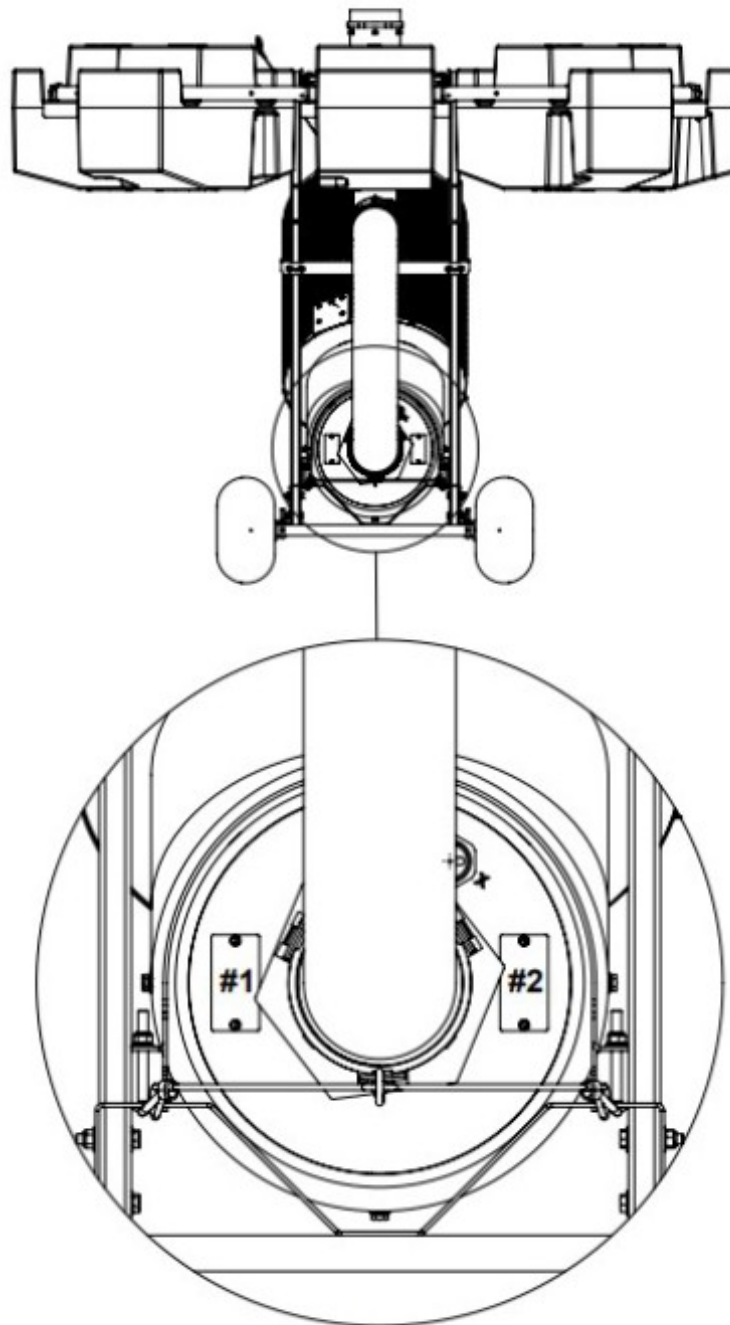

ENLARGED VIEW
TO SHOW DETAIL